

### USER MENU GUIDE

**IMPORTANT:** Please note all the default setting are highlighted in a grey color.

#### SETUP

| Main Menu       | Level 1            | Level 2           | Level 3   | Choices / Values  |         |
|-----------------|--------------------|-------------------|-----------|-------------------|---------|
| SETUP           | DMX Address        | →                 | →         | 001 - 512         |         |
|                 | DMX Channel        | →                 | →         | Basic RGBW        |         |
|                 |                    |                   |           | Basic RGBW 16 bit |         |
|                 |                    |                   |           | Ext. RGBW         |         |
|                 |                    |                   |           | Ext. RGBW 16 bit  |         |
|                 | Ethernet Interface | Custom IP Address |           | IP address byte 1 | 0 - 255 |
|                 |                    |                   |           | IP address byte 2 | 0 - 255 |
|                 |                    |                   |           | IP address byte 3 | 0 - 255 |
|                 |                    |                   |           | IP address byte 4 | 0 - 255 |
|                 |                    | Custom IP Mask    |           | IP mask byte 1    | 0 - 255 |
| IP mask byte 2  |                    |                   |           | 0 - 255           |         |
| IP mask byte 3  |                    |                   |           | 0 - 255           |         |
| IP mask byte 4  | 0 - 255            |                   |           |                   |         |
| Universe        | →                  | →                 | 000 - 255 |                   |         |
| Start Channel   | →                  | →                 | 001 - 512 |                   |         |
| Ethernet to DMX | →                  |                   | No        |                   |         |
|                 |                    |                   | Yes       |                   |         |

## OPTION

| Main Menu | Level 1           | Level 2           | Level 3 | Choices / Values   |
|-----------|-------------------|-------------------|---------|--|
| OPTION    | Pan / Tilt        | Invert Pan        | →       | On / Off   |
|           |                   | Invert Tilt       | →       | On / Off   |
|           |                   | Swap Pan-Tilt     | →       | On / Off   |
|           |                   | Encoder Pan-Tilt  | →       | On / Off   |
|           |                   | P/T Homing mode   | →       | Standard<br>Sequenced                                    |
|           |                   | Pan Home Def Pos  | →       | 0 degree<br>90 degrees<br>180 degrees<br>270 degrees     |
|           |                   | Tilt Home Def Pos | →       | 0 %<br>12.5 %<br>25 %<br>50 %<br>75 %<br>87.5 %<br>100 % |
|           |                   | P/T Enable        | →       | On / Off   |
|           | Display           | →                 | →       | On / Off   |
|           | Fan Mode          | →                 | →       | Auto<br>SLN<br>Theatre<br>Constant                       |
|           | Special Functions | Pan / Tilt Speed  | →       | Normal / Fast  |
|           |                   | Dimmer curve      | →       | Curve 1<br>Curve 2<br>Curve 3<br>Curve 4                 |
|           |                   | RGB Gamma         | →       | Gamma 1.0<br>Gamma 1.5<br>Gamma 2.2                      |
|           |                   | PWM Frequency     | →       | 600 Hz<br>1200Hz<br>2000 Hz<br>4000 Hz<br>25000 Hz       |
|           | Setting           | Default Preset    | →       | Reset To Default<br>Go Back                              |
|           |                   | User Preset 1     | →       | Load preset 1<br>Save to preset 1                        |
|           |                   | User Preset 2     | →       | Load preset 2<br>Save to preset 2                        |
|           |                   | User Preset 3     | →       | Load preset 3<br>Save to preset 3                        |

## INFORMATION

| Main Menu   | Level 1            | Level 2       | Level 3             | Choices / Values          |
|-------------|--------------------|---------------|---------------------|---------------------------|
| INFORMATION | System Errors      | →             | →                   | Read / Reset              |
|             | Fixture Hours      | Total Hours   | →                   | Read only                 |
|             |                    | Partial Hours | →                   | Reset / Go Back           |
|             | LED Hours          | Total Hours   | →                   | Read only                 |
|             |                    | Partial Hours | →                   | Reset / Go Back           |
|             | System Version     | DISP          | →                   | Fw.rev.                   |
|             |                    | NET           | →                   | Fw.rev.                   |
|             |                    | CTR1-XY       | →                   | Fw.rev.                   |
|             |                    | CTR2-MOTOR    | →                   | Fw.rev.                   |
|             |                    | CTR3-MOTOR    | →                   | Fw.rev.                   |
|             | DMX Monitor        | Functions     | →                   | <i>DMX in value (BIT)</i> |
|             | Fans Monitor       | BASE Fan      | →                   | Percentage %              |
|             |                    | LED Fan       | →                   | Percentage %              |
|             | Network parameters | →             | →                   | IP Address                |
|             |                    | →             | →                   | IP Mask                   |
| →           |                    | →             | MAC Address         |                           |
| UID         | →                  | →             | UID: xxxxxxxxxxxxxx |                           |

## MANUAL CONTROL

| Main Menu      | Level 1  | Level 2 | Level 3 | Choices / Values |
|----------------|----------|---------|---------|------------------|
| MANUAL CONTROL | Reset    | →       | →       | No / Yes         |
|                | Channels | →       | →       | Bit value        |

## TEST

| Main Menu | Level 1 | Level 2 | Level 3 | Choices / Values |
|-----------|---------|---------|---------|------------------|
| TEST      | →       | →       | →       | Pan / Tilt       |
|           | →       | →       | →       | Colour           |
|           | →       | →       | →       | Zoom             |
|           | →       | →       | →       | All              |

## ADVANCED

| Main Menu | Level 1                 | Level 2           | Level 3     | Choices / Values |
|-----------|-------------------------|-------------------|-------------|------------------|
| ADVANCED  | Access Code <u>1234</u> | Upload Firmware   | →           | Yes / No         |
|           |                         | Calibration       | Pan Offset  | 000 - 255        |
|           |                         |                   | Tilt Offset | 000 - 255        |
|           |                         |                   | Zoom Offset | 000 - 255        |
|           |                         | Color Calibration | Off         | Off              |
|           |                         |                   | Adjust      | Red 125 - 255    |
|           |                         |                   |             | Green 125 - 255  |
|           |                         |                   |             | Blue 125 - 255   |
|           |                         | White 125 - 255   |             |                  |
|           |                         | Menu Locking      | →           | 1234             |
| Recover   | →                       | Yes / No          |             |                  |

## SET UP MENU

### Setup → DMX ADDRESS

**Important: Without the input signal, the displayed DMX Address blinks.**

It lets you select the DMX address for the control signal. A DMX address between 001 and 512 can be selected.

### Setup → DMX CHANNEL

It lets you select the projector operating mode, selecting one of the four available modes (see DMX Channel Function document)

- Basic RGBW
- Basic RGBW 16 bit
- Extended RGBW
- Extended RGBW 16 bit

### Setup → ETHERNET INTERFACE

It lets you set Ethernet settings to be assigned to the projector as indicated below:

#### Custom IP Address

It lets you assign the IP Address according to the used control unit.

#### Custom IP Mask

It lets you assign the Subnet Mask according to the used control unit.

#### Universe

It lets you assign a Universe to a series of fixtures. Values between 000 and 255.

#### Start Channel

It lets you set the Art-Net start address for the fixture. Values between 001 and 512.

#### Ethernet to DMX

It lets you enable or disable the transmission of the Ethernet protocol by the DMX line. When activated the master unit transfer the DMX data to all the connected fixtures.

- NO: DMX data transmission disabled.
- YES: DMX data transmission enabled.

## OPTION MENU

### Option → PAN / TILT

#### INVERT PAN

It lets you enable (ON) the Pan reverse movement. Select OFF to turn off or disable this option

#### INVERT TILT

It lets you enable (ON) the Tilt reverse movement. Select OFF to turn off or disable this option.

#### SWAP PAN-TILT

It lets you enable (ON) Pan and Tilt parameters inversion (and simultaneously Pan fine and Tilt fine). Select OFF to turn off or disable this option.

#### ENCODER PAN-TILT

It lets you enable (ON) or disable (OFF) the Pan and Tilt Encoder functionality.

#### P/T HOMING MODE

It lets you set the initial Pan and Tilt Reset mode.

- **Standard:** Pan & Tilt are simultaneously reset.
- **Sequenced:** Tilt is reset first followed by Pan.

#### PAN HOME DEF POS

It lets you assign the Pan parameter “home” position at the end of Reset (without a DMX input signal), selecting one from the 4 available positions:

- **0 degree**
- **90 degrees**
- **180 degrees**
- **270 degrees**

#### TILT HOME DEF POS

It lets you assign the Tilt parameter “home” position at the end of Reset (without a DMX input signal), selecting one from the 7 available positions:

- **0%**
- **12.5%**
- **25%**
- **50%**
- **75%**
- **87.5%**
- **100%**

#### PAN / TILT ENABLE

Allows you to disable the Pan and Tilt movement function (Select OFF). Select ON to enable the pan and tilt functionality.

### Option → DISPLAY

It lets you activate (ON) the display brightness reduction after 30 seconds in idle status. Select OFF to disable this option.

### Option → FAN MODE

Defines the fixture cooling mode:

- **Auto:** Cooling increase/decrease in correlation to the LED engine temperature
- **SLN:** Fan power always at minimum range, light output change accordingly with ambient temperature.
- **Theatre:** Fan power always at a constant range, light output constantly reduced.
- **Constant:** Fan power always at maximum range.

# OPTION MENU

## Option → SPECIAL FUNCTIONS

### Pan / Tilt Speed


It lets you select two different Pan and Tilt speeds:

- Normal
- Fast

### Dimmer Curve

It lets you select four different Dimmer curves (see details below):


- Curve 1
- Curve 2
- Curve 3
- Curve 4

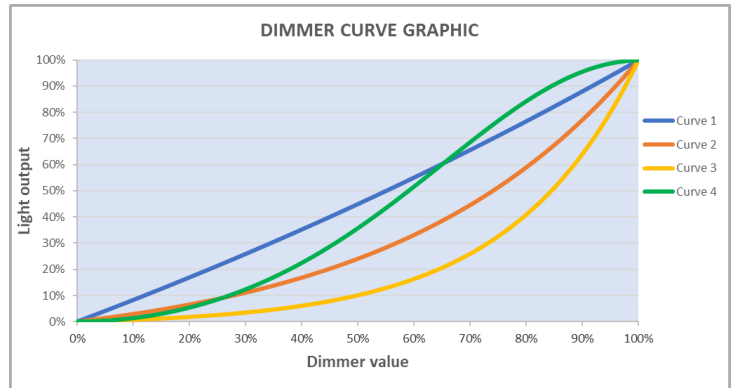

### RGB Gamma

Lets you select three different RGBW gamma curves (see details below):

- Gamma 1.0
- Gamma 1.5
- Gamma 2.2

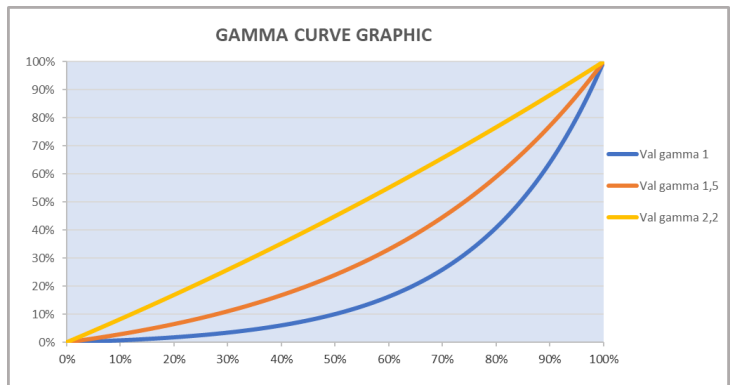

### PWM FREQUENCY

It lets you select six different base frequencies of LEDs:

- 600Hz
- 1200Hz
- 2000Hz
- 4000Hz
- 25000Hz

## OPTION MENU

### Option → SETTINGS

Used to save 3 different settings of the items in the option menu and relevant submenus.

- Default preset (\*)
  - User preset 1
  - User preset 2
  - User Preset 3
- **Load preset 'X'** is used to recall a previously stored configuration.
  - **Save to preset 'X'** is used to save the current configuration.

#### **IMPORTANT:**

(\*) DEFAULT PRESET It lets you restore default values on all option menu items and relevant submenus.



## INFORMATION MENU

### Information → SYSTEM ERRORS

It displays the list of errors that occurred when the projector is been turned on.

To reset the SYSTEM ERRORS list, press OK. A confirmation message appears (Are you sure you want to clear error list?) Select YES to confirm the reset.

### Information → FIXTURE HOURS

It lets you view the fixture's working hours (total and partial).

#### Total counter

It counts the number of fixture working life hours (from construction to date). Note: This value cannot be reset.

#### Partial counter

It counts the partial number of projector working life hours from the last reset to date.

Press **OK** to reset the partial counter. A confirmation message appears on the display: Select **Reset** to confirm or **Go Back** to undo the operation.

### Information → LED HOURS

It lets you view LED working hours (total and partial).

#### Total counter

It counts the number of projector working hours with the LED turned on (from construction to date). Note: This value cannot be reset.

#### Partial counter

It counts the partial number of LED working hours from the last reset to date.

Press **Enter** to reset the partial counter. A confirmation message appears on the display: Select **Reset** to confirm or **Go Back** to undo the operation.

### Information → SYSTEM VERSION

It lets you view the firmware version for each electronic board in the projector:

- DISP:-----Vx.x
- NET:-----Vx.x
- CTR1-XY:-----Vx.x
- CTR2-Motor:----- Vx.x
- CTR3-Motor:-----Vx.x

### Information → DMX MONITOR

It lets you view the levels of DMX parameters in bits that the fixture is receiving.

### Information → FANS MONITOR

It lets you view the function's percentage of the fan installed in the fixture:

Base Fan cooling → Base Fan. x%

LED fan cooling → Led Fan: x%

### Information → NETWORK PARAMETERS

It lets you view the Ethernet setting of the fixture:

**IP address:** Internet Protocol address (two projectors must not have the same IP address)

**IP mask:** 255.0.0.0

**Mac address:** Media Access Control; the fixture's Ethernet Address

### Information → UID

It shows the RDM Unique ID (UID), the exclusive address of the fixture to communicate via RDM.

## MANUAL CONTROL MENU

### Manual Control → RESET

It lets you reset the fixture's parameters from the user menu.

### Manual Control → CHANNEL

It lets you control the DMX parameters from the fixture's user menu. For any single parameter can be set the level between 0 and 255 bits.

## TEST MENU

### TEST

It lets you perform a test of the fixture's effects by a pre-saved sequence:

- Pan and Tilt test sequence
- Colour test sequence
- Zoom test sequence
- All effects test sequence

## ADVANCED MENU

**IMPORTANT:** To access the Advanced Menu enter the code 1234.

### Advanced → UPLOAD FIRMWARE

It lets you transfer the firmware from one fixture to all the other connected to the same line. A confirmation message will appear on the display "Are you sure?" Select YES to confirm or NO to abort the operation.

**IMPORTANT:** It is possible to transfer the firmware only with the same fixtures models.

**IMPORTANT:** We recommend to upload the firmware to a maximum 5/6 units per time.

### Advanced → CALIBRATION

It lets you from the control panel to make a fine electronics adjustments on some effects to get a better consistency within a group of fixtures.

### Advanced → COLOR CALIBRATION

It lets you to make a fine electronics adjustments on the colours parameters to get a better consistency within a group of fixtures.

#### Default setting Off

- Red 125-255
- Green 125-255
- Blue 125-255
- White 125-255

**IMPORTANT:** The setting has to be activated on the fixture through the FUNCTION parameter. Value 078-082 Bits.

### Advanced → MENU LOCKING

It allows you to assign a password to lock the access to the ADVANCED menu to avoid any wrong setting or operation by people there are not from the technical staff. The default Unlock Code is: 1234

**IMPORTANT:** If necessary to reset any custom code go to Option → Setting → Default Preset → Reset to default, it will set all the default setting and restore the coder to 1234.

### Advanced → RECOVER

The recover function allows to restore the functionality of the electronic boards following a fail during the firmware update process of the fixture. Please refer to the "Recover function" tech document for the detail of the procedure.